



USER MANUAL – EN

IN 26361 Massage chair inSPORTline Verceti



CONTENTS

- SAFETY INSTRUCTIONS..... 3
- WARNING 5
- PRODUCT DESCRIPTION 5
- FUNCTIONS..... 6
- CONTROLLER 6
- USE 6
- FLOOR PROTECTION..... 7
- MOVING THE CHAIR..... 7
- PRODUCT SPECIFICATIONS..... 8
- MAINTENANCE 8
- ENVIRONMENT PROTECTION 8
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 8

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual

SAFETY INSTRUCTIONS

IMPORTANT SAFETY WARNINGS

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Kids can move around this product only under adult supervision.
- Use only well-grounded socket and proper power cord.
- Pull out the plug after every use or during maintenance to avoid injury or damaging the product.
- Please use this product according to the manual.
- Do not use unauthorized modifications or accessories.
- Only for indoor use.
- Before first use, please read the manual carefully.
- Use this product as is described in the manual.
- Recommended maximum use time is 20 minutes.
- Do not use the device if it is damaged. (frame, leather etc.)
- Do not use the chair if the ventilation is blocked.
- Do not put on chair heavy items or objects with sharp edge.
- Do not fall asleep during massage for safety reasons.
- Do not use the chair after you consumed alcohol or other drugs or if you are sick or dizzy.
- Do not use within one hour after meal.
- Please be caution and do not use too strong massage.
- Weight limit: 150 kg
- For home use

POSITION OF MASSAGE CHAIR

- Do not use the chair in high temperatures or moist environments (e.g. bathroom).
- Do not use the chair immediately after temperature change.
- Do not use in dust or impropriety rooms.
- In is important to secure enough space and ventilation.

PEOPLE THAT SOULD NOT USE THE PRODUCT

- People suffering from osteoporosis.
- People who have hearth problems or are using electronic medical equipment (e.g. peacemaker).
- People suffering fever.
- Pregnant women.
- People suffering skin diseases.
- Kids younger 14 years old or people suffering mental illness can use this product only under adult supervision.

- People that are recommended rest from the doctor or people suffering from sickness.
- Do not use this chair if you have wet body.
- Do not use the heat function if you are heat sensitive.

SAFETY


- Maintenance should be done only by qualified person. Use should not disassemble the chair or do the maintenance by themselves.
- After every use unplug the cord.
- Do not use the product if the power cord, plug or socket are damaged.
- If you are not using the chair for long period of time, store it at a clean and dry place and secure the power cord.
- Do not expose the chair to high temperatures, direct sunlight and do not place the chair near heat source.
- If the power cord, plug or socket are damaged, ask professional or qualified person for help.
- For cleaning use wet sponge only. Do not use thinner, gasoline or alcohol for cleaning.
- Mechanical parts are assembled and made to require minimum maintenance.
- Pay extra attention to not damage the chair with sharp objects.
- Do not push the chair on uneven ground, always pick the chair up and then move.
- Do not let the chair to work for long periods of time.

COMMON PROBLEMS AND SOLUTIONS

- It is common that the motor is making sounds.
- If the chair is not working, please check the power cord, plug and socket and that the switch is ON.
- After the massage time is over the massage chair will turn OFF. The product will automatically shut down if it is overheated – wait at least half an hour before next massage.

WARNING

Do not leave children unattended around the chair. Improper sitting or climbing on the chair can cause the chair to tip over or the child to fall.

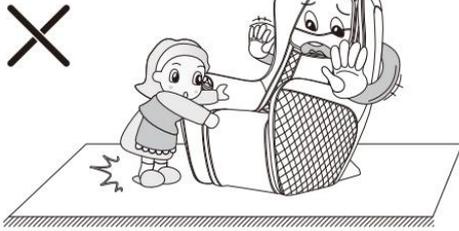

Before use, remove all items from your pockets (mainly keys, cell phone, etc.)





Take care of children that are moving around the chair, especially during use. There are small gaps and moving parts that can pinch limbs.



Do not use continuously for more than 2 hours. Do not sit on the backrest or arm rests. Prevent misuse of the chair.



PRODUCT DESCRIPTION

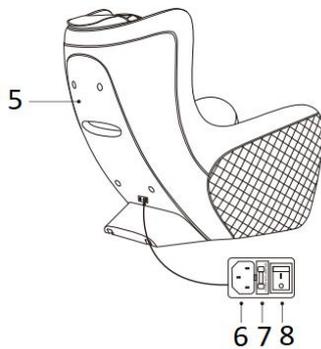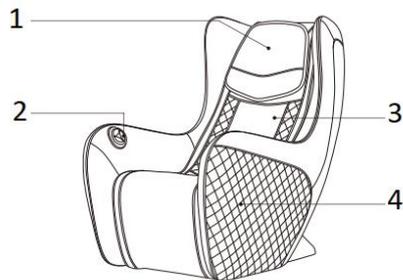

1. Pillow

2. Controller

3. Backrest

4. Arms rest

5. Back cover

6. Power supply


7. Fuse

8. Power switch

FUNCTIONS

- Massages with four motors, silent drive with up and down movements
- 3 types of massage: kneading, tapping, combination of kneading and tapping
- Automatic massages: full body, upper body, lower body
- You can massage selected points using two directional massage heads (kneading), two non-directional heads (kneading) and two speed settings (tapping).
- Anatomically shaped backrest.

CONTROLLER

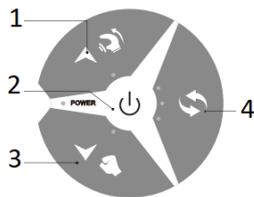

Kneading - up

Switch

Knocking - down


Automatic massage

USE

Turning on



Plug into the power supply

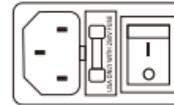

Turn the power switch to the on position

Starting the massage


Button	Function	Description	Indicators	
	Power switch	Starts/turn off the chair	Flashes	Standby Mode
			Constant	Running, default message: two-way kneading and light tapping
	Kneading: up	Short press: switch off or change the type of kneading	Flashes	Two-way movement
		Hold: move the kneading heads down, move the head to a fixed position	Constant	Unidirectional movement
			Off	Off
	Knocking: down	Hold: Move the position of the knocking head down, move the head to a fixed position	Flashes	Faintly
			Constant	Strongly
		Short press: Turn off or change the intensity	Off	Off
			/	/
	Automatic massage	Change to full body massage, upper half body, lower half body	Upper half of the body	Upper half of the body

			Whole body	Whole body
			Lower half of the body	Lower half of the body

Stop massage and switch off

Press the switch to turn off the massage. The head will return to its original position.

After returning the heads to their original position, turn off the main switch.

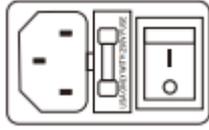


Turn off the power switch



Disconnect from the power supply

FLOOR PROTECTION


Placing the chair on wooden floors without any mat or carpet can damage the floor. To prevent damaging to the floor, place a carpet or mat under the chair.

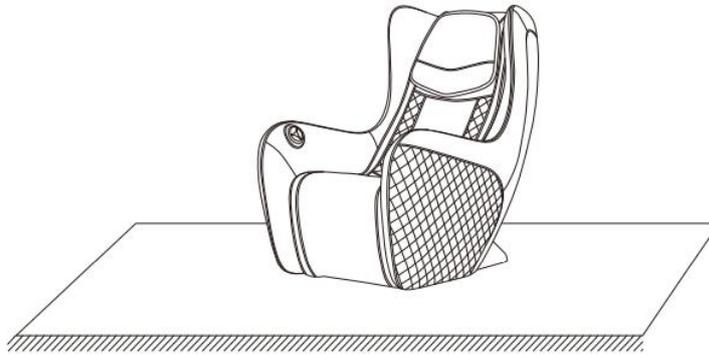

Warning: do not carry the chair over an uneven or narrow space. 2 people are needed to lift and move the chair.

MOVING THE CHAIR

Before moving the chair, make sure that you have disconnected the chair from the electricity supply and that there are no obstacles in the area. Grab the sides of the chair. Pay attention to the limbs. Before any manipulation, the chair must be switched off and disconnected from the electricity supply.

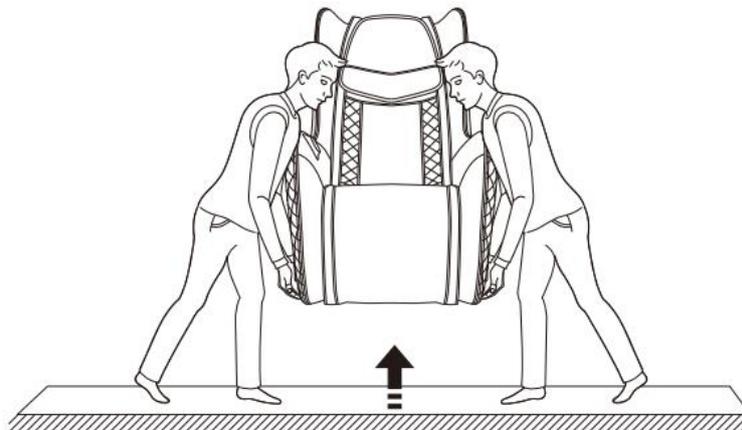

PRODUCT SPECIFICATIONS

Model	A1501-2
Name	Massage Chair
Voltage	110-120V ~ 60 Hz
	220 – 240V ~ 50 Hz/60 Hz
Power	40 W
Operating hours	20 min
Safety	Třída I

MAINTENANCE

- The chair must be placed in a room with good air circulation.
- Do not leave exposed to direct sunlight. Place in a dry and shady place.
- Wipe off dirt with a damp, soft cloth and dry the chair.
- You can clean the chair with skin and fabric care products.
- Do not use aggressive cleaning agents and solvents.
- After use, wipe off sweat and dirt with a damp cloth.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless

otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such

agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

