



USER MANUAL – EN

IN 29685 Infrared LED panel inSPORTline Veluni - 4x30 LED

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read the manual before use and keep it for future reference.
- Not intended as a medical device.
- Use only according to the manual.
- Not suitable for pregnant or nursing women, children and infants.
- Do not use the panel if you have a mental or physical disability, skin disease (eczema, albinism, psoriasis, etc.). Always consult a doctor before use.
- Do not use the panel if you are sensitive to light or are taking medications that increase sensitivity to light.
- After use, do not apply cosmetic products that may increase sensitivity to light.
- Wear protective goggles and close your eyes during use. Do not use the panel if you have a hereditary vision disorder.
- If you feel discomfort during use, stop using the panel immediately and contact a doctor.
- The device is not waterproof, do not immerse the panel in water.
- Keep out of reach of children.
- Do not use a worn or damaged product.
- Do not repair, modify or disassemble the product yourself.

SPECIFICATION

Power: 12W (max.)

Charger: DC5V 1A/2A

Built-in battery: 1500mAh/7.4V

Dimensions: L278*W178*H16mm

LED wavelength:

- Red: 630nm
- Blue: 470nm
- Yellow: 590nm
- IR: 850nm

Weight: 625g


Operating temperature: 0°C to 45°C

Storage and transport temperature: -5°C to 55°C

Operating Humidity: 30% to 95%


Malting and transport moisture: 20% to 85%

DIMENSIONS

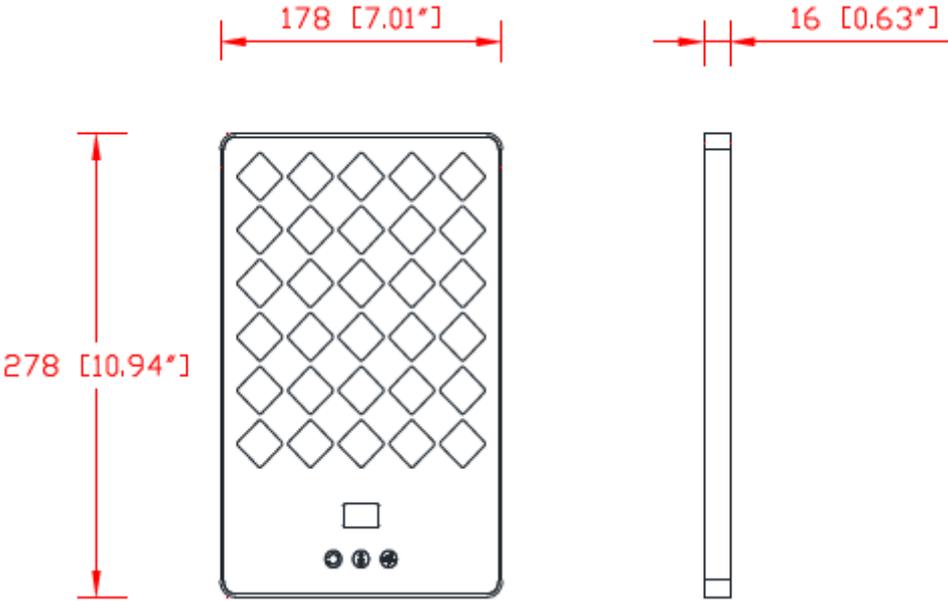

PACKAGE CONTENTS

1. LED panel, 2. Frame, 3. Safety goggles, 4. Charging cable, 5. User manual

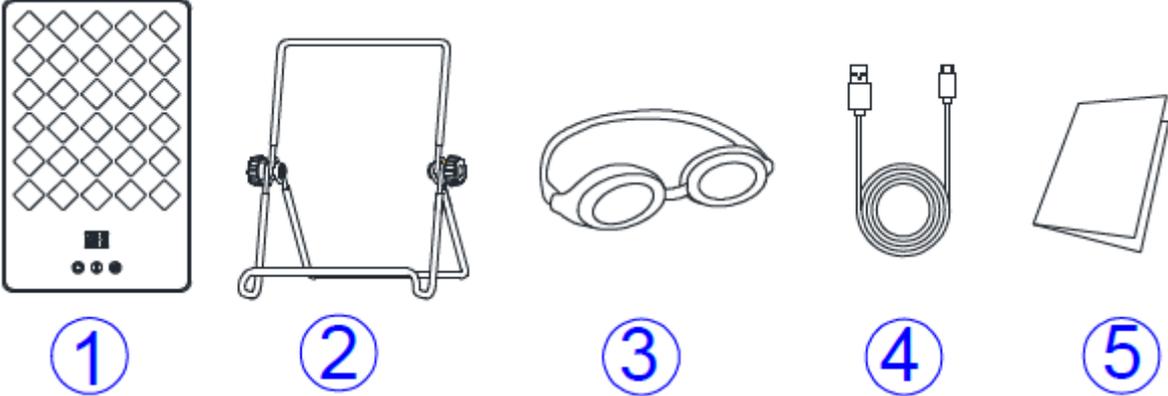

DISPLAY



Display

Battery		Intensity	
	25% capacity		Intensity L1
	50% capacity		Intensity L2
	75% capacity		Intensity L3
	100% capacity		Intensity L4, lights operate in flicker mode
Light Mode Type			
	Red		
	Blue		
	Yellow		
	Infrared		
Timer			
	Remaining time		

Buttons

	Press to select one of 6 light modes
	Hold for 2 seconds to switch on / off the panel Press to set timer 30 / 25 / 20 / 15 / 10 / 5 min
	Press to set the intensity 1 – 4 level, at 4 level the light flicker

USE

Make sure the panel is charged before using it for the first time.

Press the power button for 2 seconds to start the panel. The panel starts at default setting: timer 30 min, intensity 4, light mode 1.

Timer

Press the button to set the timer. After 3 seconds of inactivity, the time is saved. The current remaining operating time is shown on the display.

Select a light mode

Press the button to set one of 6 light modes.

Mode 1	R	Red	Increased blood flow and collagen production. Helps with tissue repair (replacement of old skin cells with new ones) and pore reduction.
Mode 2	B	Blue	Soothing, anti-inflammatory, destroys skin bacteria
Mode 3	Y	Yellow	Energizes the skin, helps reduce wrinkles, balance the color of the pigment and smooths the skin
Mode 4	R+IR	Red + Infrared Light	Promotes cell regeneration, accelerates metabolism, breaks down subcutaneous cellulite, shrinks pores, firms the skin and increases skin elasticity.
Mode 5	R+Y+IR	Red + Yellow + Infrared Light	Breaks down cellulite, lightens chloasma and freckles, improves blood and lymphatic circulation.
Mode 6	R+B+IR	Red + Blue + Infrared light	Suppresses skin inflammation and reduce visibility of scars, promotes cell regeneration, improves lymphatic circulation and gently cleanses the skin.


Intensity

Press to select one of the 4 intensity levels.

Notes:

- The panel has built-in protection against excessive discharge. When the battery capacity drops below a certain value, the battery icon will flash for 3 seconds and then the panel will turn off.
- The panel has built-in overvoltage protection. During charging, the CH symbol is shown on the display and the battery symbol flashes. Once the battery is fully charged, the display will show the FU symbol and the battery symbol will not flash.
- Do not charge the panel during use, always turn off the panel before charging.
- If you plan to store the panel for an extended period of time, recharge the battery regularly.

ASSEMBLY

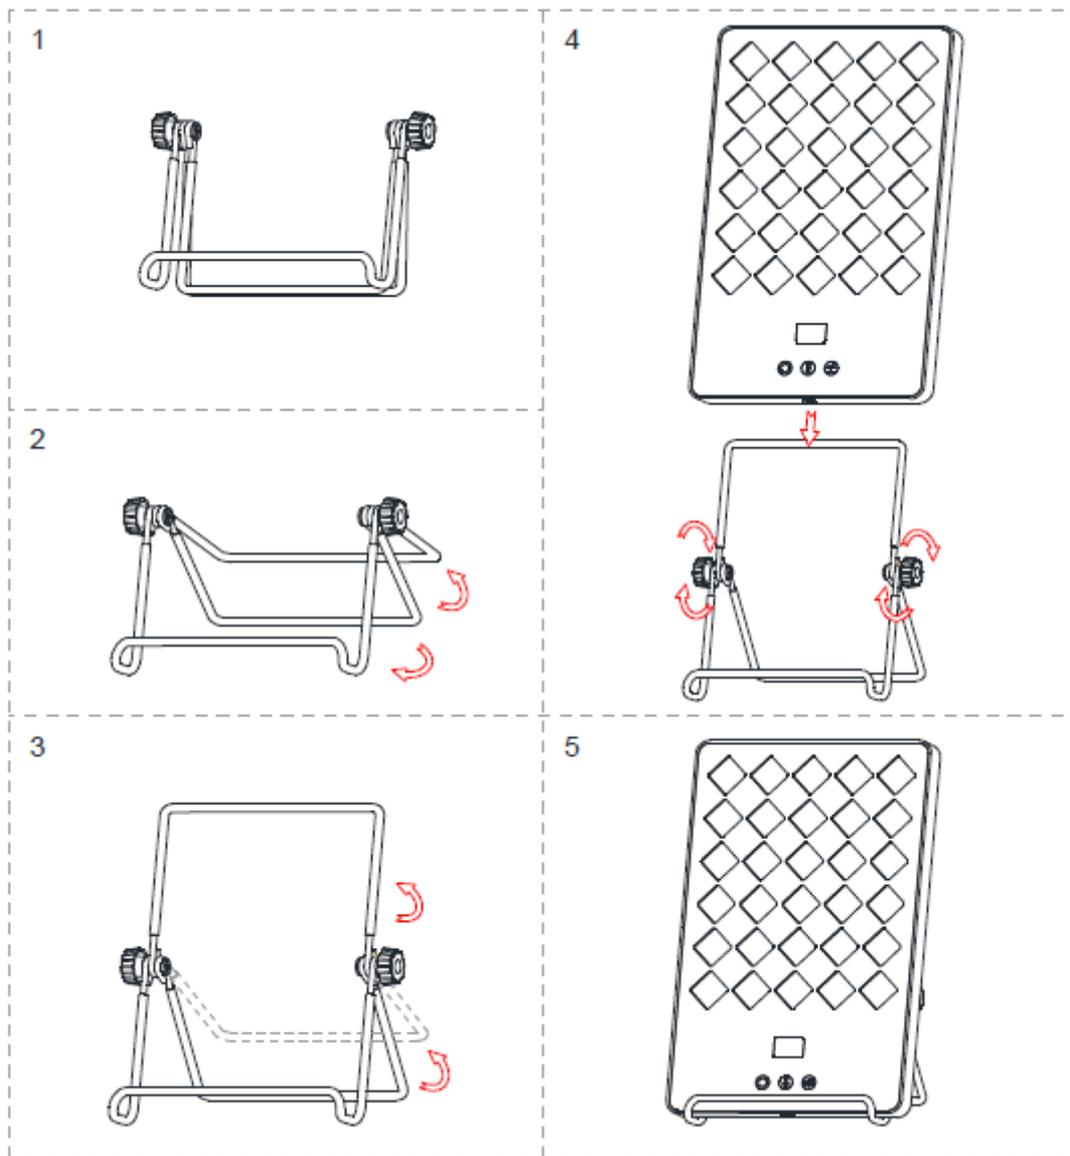

ENVIRONMENT PROTECTION

After the product lifespan expires or if the possible repairing is uneconomical, dispose of it according to the local laws and is environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural resources. Moreover, you can help protect human health. If you are not sure of the correct disposing, ask local authorities to avoid law violations or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Kutnohorská 531, Štěrboholy Retail Park, 109 00, Prague 10, ČR, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations, it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damage
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZSEVEN SPORT s.r.o.

Registered Office: Kutnohorská 531, Štěrboholy Retail Park,
109 00, Prague 10, Czech Republic
Headquarters: Dělnická 957, Vítkov, 749 01
Service: Čermenská 486, Vítkov 749 01

CRN: 26847264 VAT ID: CZ26847264

Phone: +420 556 300 970
Email: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná
6471, Trenčín 911 01, SK

CRN: 46259317 VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

